


# Stackable File Pockets

## for Partition Wall Mounting


### STACKING INSTRUCTIONS

Attach pockets together using ST Pins™ included in this carton.

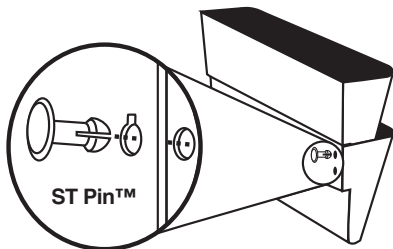

### MOUNTING INSTRUCTIONS

1. Place pocket on wall.
2. Mark screw positions with a pencil.
3. Drill holes at marks.
4. Insert anchors into holes.
4. Drive screws into anchors.
6. Align holes on wall pocket with screws on wall and hang.

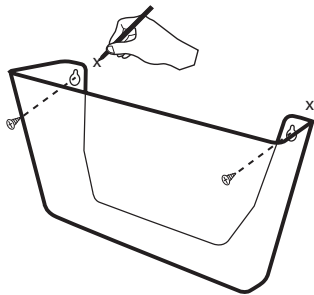

#### MODELS / MODÈLES / MODELOS:

73201, 73202, 73201RT, 73202RT, 73204, 73402,  
73404, 73601RT, 73602RT, 73604, 73702,  
73704, 74104, 74301, 74302, 74302RT, 74304,  
74702, 74704, 83201, 83202, 83204, 83601, 83602,  
83604, 93204, 93204RT, 93604

[www.deflecto.com](http://www.deflecto.com)

©2011 Deflecto, LLC  
EXP3PKINST-A

**deflecto®**