


STACKING INSTRUCTIONS

Attach pockets together using ST Pins™ included in this carton.

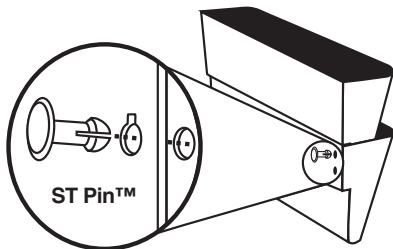

MOUNTING INSTRUCTIONS

Attach partition brackets to top pocket using nuts and bolts included.

Adjust the partition bracket to fit the thickness of your panel and tighten.

1 1/2" - 2 1/2"
3.81 cm - 6.35 cm

